

Honda Helix Oil Change

Time and Ease: Easy - 30 minutes

Tools/Supplies: Wrench, oil, oil pan, rags, funnel, maybe sealing washer

Step 1 - Park the scooter on its center stand on a firm, level surface. If the engine is cold, start it and let it idle for 3–5 minutes. Turn the engine off. Wait 2–3 minutes for the oil to settle.

Step 2 - Place a drain pan under the crankcase drain bolt (1). To drain the oil, remove the oil filler cap/dipstick (2), crankcase drain bolt (1), and sealing washer (3).

Step 3 - Check the condition of the sealing washer on the drain bolt. Replace the washer every other time the oil is changed. Wait until all oil is drained.

Step 4 - Install the drain bolt and tighten it to the specified torque: 18 lb-ft (25 N-m, 2.5 kgf-m).

Step 5 - Fill the crankcase with the recommended oil (Pro Honda GN4, HP4, or HP4M 4-stroke oil), approximately: 0.8 US qt (0.8 L).

Step 6 - Install the oil filler cap/dipstick securely. Start the engine and let it idle for 3–5 minutes.

Step 7 - Stop the engine and check that the oil level is at the upper level mark on the dipstick. Make sure there are no oil leaks.

